

**V500-LPN5627/
V500-LPR5627 Raster
Miniature High Speed Laser
Fixed Position Scanner**

USER MANUAL

OMRON

**V500-LPN5627/V500-LPR5627 Raster
Miniature High Speed Laser/
Fixed Position Scanner
User Manual**

© **OMRON Electronics LLC 2003**

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of OMRON.

No patent liability is assumed with respect to the use of the information contained herein. Moreover, because OMRON is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, OMRON assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

Terms and Conditions of Sale

1. **Offer; Acceptance.** These terms and conditions (these "Terms") are deemed part of all quotations, acknowledgments, invoices, purchase orders and other documents, whether electronic or in writing, relating to the sale of goods or services (collectively, the "Goods") by Omron Electronics LLC ("Seller"). Seller hereby objects to any terms or conditions proposed in Buyer's purchase order or other documents which are inconsistent with, or in addition to, these Terms.
2. **Prices.** All prices stated are current, subject to change without notice by Seller. Buyer agrees to pay the price in effect at time of shipment.
3. **Discounts.** Cash discounts, if any, will apply only on the net amount of invoices sent to Buyer after deducting transportation charges, taxes and duties, and will be allowed only if (i) the invoice is paid according to Seller's payment terms and (ii) Buyer has no past due amounts owing to Seller.
4. **Interest.** Seller, at its option, may charge Buyer 1-1/2% interest per month or the maximum legal rate, whichever is less, on any balance not paid within the stated terms.
5. **Currencies.** If the prices quoted herein are in a currency other than U.S. dollars, Buyer shall make remittance to Seller at the then current exchange rate most favorable to Seller and which is available on the due date; provided that if remittance is not made when due, Buyer will convert the amount to U.S. dollars at the then current exchange rate most favorable to Seller available during the period between the due date and the date remittance is actually made.
6. **Governmental Approvals.** Buyer shall be responsible for, and shall bear all costs involved in, obtaining any government approvals required for the importation or sale of the Goods.
7. **Taxes.** All taxes, duties and other governmental charges (other than general real property and income taxes), including any interest or penalties thereon, imposed directly or indirectly on Seller or required to be collected directly or indirectly by Seller for the manufacture, production, sale, delivery, importation, consumption or use of the Goods sold hereunder (including customs duties and sales, excise, use, turnover and license taxes) shall be charged to and remitted by Buyer to Seller.
8. **Financial.** If the financial position of Buyer at any time becomes unsatisfactory to Seller, Seller reserves the right to stop shipments or require satisfactory security or payment in advance. If Buyer fails to make payment or otherwise comply with these Terms or any related agreement, Seller may (without liability and in addition to other remedies) cancel any unshipped portion of Goods sold hereunder and stop any Goods in transit until Buyer pays all amounts, including amounts payable hereunder, whether or not then due, which are owing to it by Buyer. Buyer shall in any event remain liable for all unpaid accounts.
9. **Cancellation; Etc.** Orders are not subject to rescheduling or cancellation unless Buyer indemnifies Seller fully against all costs or expenses arising in connection therewith.
10. **Force Majeure.** Seller shall not be liable for any delay or failure in delivery resulting from causes beyond its control, including earthquakes, fires, floods, strikes or other labor disputes, shortage of labor or materials, accidents to machinery, acts of sabotage, riots, delay in or lack of transportation or the requirements of any government authority.
11. **Shipping; Delivery.** Unless otherwise expressly agreed in writing by Seller:
 - a. Shipments shall be by a carrier selected by Seller;
 - b. Such carrier shall act as the agent of Buyer and delivery to such carrier shall constitute delivery to Buyer;
 - c. All sales and shipments of Goods shall be FOB shipping point (unless otherwise stated in writing by Seller), at which point title to and all risk of loss of the Goods shall pass from Seller to Buyer, provided that Seller shall retain a security interest in the Goods until the full purchase price is paid by Buyer;
 - d. Seller may over or under ship by up to 3% of the scheduled quantity. Exact quantity orders will be accepted at a 5% unit price premium.
 - e. Delivery and shipping dates are estimates only.
 - f. Seller will package Goods as it deems proper for protection against normal handling and extra charges apply to special conditions.
12. **Claims.** Any claim by Buyer against Seller for shortage or damage to the Goods occurring before delivery to the carrier must be presented in writing to Seller within 30 days of receipt of shipment and include the original transportation bill signed by the carrier noting that the carrier received the Goods from Seller in the condition claimed.
13. **Warranties. (a) Exclusive Warranty.** Seller's exclusive warranty is that the Goods will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Seller. Seller disclaims all other warranties, express or implied. **(b) Limitations.** SELLER MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE GOODS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE GOODS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. Seller further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Goods or otherwise of any intellectual property right. **(c) Buyer Remedy.** Seller's sole obligation hereunder shall be to replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Good or, at Seller's election, to repay or credit Buyer an amount equal to the purchase price of the Good; provided that in no event shall Seller be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Goods unless Seller's analysis confirms that the Goods were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any goods by Buyer must be approved in writing by Seller before shipment.
14. **Damage Limits; Etc.** SELLER SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE GOODS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY. Further, in no event shall liability of Seller exceed the individual price of the Good on which liability is asserted.
15. **Indemnities.** Buyer shall indemnify and hold harmless Seller, its affiliates and its employees from and against all liabilities, losses, claims, costs and expenses (including attorney's fees and expenses) related to any claim, investigation, litigation or proceeding (whether or not Seller is a party) which arises or is alleged to arise from Buyer's acts or omissions under these Terms or in any way with respect to the Goods. Without limiting the foregoing, Buyer (at its own expense) shall indemnify and hold harmless Seller and defend or settle any action brought against Seller to the extent that it is based on a claim that any Good made to Buyer specifications infringed intellectual property rights of another party.
16. **Property; Confidentiality.** The intellectual property embodied in the Goods is the exclusive property of Seller and its affiliates and Buyer shall not attempt to duplicate it in any way without the written permission of Seller. Notwithstanding any charges to Buyer for engineering or tooling, all engineering and tooling shall remain the exclusive property of Seller. All information and materials supplied by Seller to Buyer relating to the Goods are confidential and proprietary, and Buyer shall limit distribution thereof to its trusted employees and strictly prevent disclosure to any third party.
17. **Miscellaneous. (a) Waiver.** No failure or delay by Seller in exercising any right and no course of dealing between Buyer and Seller shall operate as a waiver of rights by Seller. **(b) Assignment.** Buyer may not assign its rights hereunder without Seller's written consent. **(c) Law.** These Terms are governed by Illinois law (without regard to conflict of law principles). Federal and state courts in Illinois shall have exclusive jurisdiction for any dispute hereunder. **(d) Amendment.** These Terms constitute the entire agreement between Buyer and Seller relating to the Goods, and no provision may be changed or waived unless in writing signed by the parties. **(e) Severability.** If any provision hereof is rendered ineffective or invalid, such provision shall not invalidate any other provision. **(f) Setoff.** All claims hereunder by Seller are subject to setoff by Seller for any counterclaim arising out of any transaction with Buyer. **(g) Definitions.** As used herein, "including" means "including without limitation."

PRECAUTIONS

This section provides general precautions for using the V500 Bar Code Reader.

The information contained in this section is important for the safe and reliable application of the V500 Bar Code Reader. You must read this section and understand the information contained before attempting to set up or operate a Bar Code Reader.

1	Intended Audience	viii
2	General Precautions	viii
3	Application Precautions	viii

1 Intended Audience

This manual is intended for the following personnel, who must also have knowledge of electrical systems (an electrical engineer or the equivalent).

- Personnel in charge of installing automation systems.
- Personnel in charge of designing automation systems.
- Personnel in charge of managing automation systems and facilities.

2 General Precautions

The user must operate the V500 Bar Code Reader according to the performance specifications described in the operation manuals.

Please use particular care before using the V500 Bar Code Reader under conditions which are not described in the manual or applying the V500 Bar Code Reader to nuclear control systems, railroad systems, aviation systems, vehicles, combustion systems, medical equipment, amusement machines, safety equipment, and other systems, machines, and equipment that may have a serious influence on lives and property if used improperly.

Make sure that the ratings and performance characteristics of the V500 Bar Code Reader are sufficient for the systems, machines, and equipment, and be sure to provide the systems, machines, and equipment with double safety mechanisms.

This manual provides information for installing and operating OMRON V500 Bar Code Readers. Be sure to read this manual before operation and keep this manual close at hand for reference during operation.

- ! WARNING** It is extremely important that a V500 Bar Code Reader be used for the specified purpose and under the specified conditions, especially in applications that can directly or indirectly affect human life.

3 Application Precautions

- ! WARNING** Do not touch the terminals while the power is ON. Doing so may cause an electric shock.
- ! WARNING** It may be necessary to install a power supply breaker to turn OFF the power supply before working on the V500 Bar Code Reader. Not turning OFF the power supply may result in electrical shock.
- ! WARNING** Do not allow metal fragments or lead wire scraps to fall inside the V500 Bar Code Reader. These may cause electric shock, fire, or malfunction.
- ! WARNING** Do not use the V500 Bar Code Reader in flammable and explosive gas atmospheres. There is danger of explosion.
- ! WARNING** Never disassemble, repair, or modify the V500 Bar Code Reader. Doing so may cause electric shock, fire or malfunction.

Observe the following precautions when using the V500 Bar Code Reader.

- Use and store the V500 Bar Code Reader within the specified temperature and humidity ranges. If there is a possibility of the ambient temperature rising to a temperature above the specified temperature range, take steps, such as installing fans, to cool the V500 Bar Code Reader. If the V500 Bar Code Reader is installed incorrectly, heat will build up inside, shortening the life of the V500 Bar Code Reader. If heat buildup is a problem, use forced cooling, e.g., install a cooling fan.
- Do not touch the patterns or components on a board with your bare hands. Hold it by the case.
- To allow heat to escape, do not block the area around the V500 Bar Code Reader. (Ensure that enough space is left for the heat to escape.) Do not block the ventilation holes on the casing.
- Use the V500 Bar Code Reader within the specified power supply voltage and rated load ranges.
- Wire properly using the correct terminal polarity.
- Make sure that the rated voltage is reached within 2 seconds after the power supply is turned ON.
- Attach a surge suppressor or noise filter to peripheral devices that generate noise (in particular, motors, transformers, solenoids, magnetic coils or other equipment that have an inductance component). When mounting a noise filter on the power supply, be sure to first check the filter's voltage and current capacity, and then mount the filter as close as possible to the V500 Bar Code Reader. Allow as much space as possible between the V500 Bar Code Reader and devices that generate powerful high-frequency noise (e.g., high-frequency welders, high-frequency sewing machines) or surges.
- To reduce induction noise, separate the high-voltage or large-current power lines from other lines, and avoid parallel or common wiring with the power lines when you are wiring to the terminals. We recommend using separating pipes, ducts, or shielded lines.
- Install a switch or circuit breaker in a location easily accessible to the operator and label it appropriately.
- Do not use the V500 Bar Code Reader in the following places:
 - Places subject to dust or corrosive gases (in particular, sulfide gas and ammonia gas)
 - Places subject to high humidity, condensation or freezing
 - Places subject to direct sunlight
 - Places subject to vibration and large shocks
 - Places subject to splashing liquid or oily atmosphere
 - Places directly subject to heat radiated from heating equipment
 - Places subject to intense temperature changes
- Cleaning: Do not use paint thinner or the equivalent. Use standard grade alcohol to clean the V500 Bar Code Reader.

Table of Contents

Section 1: Introduction and Getting Started

Product Overview	3
Quick Start-Up Procedure	3

Section 2: Technical Specifications

Physical Specifications	5
Symbologies Supported	5
Optical Specification	5
Pitch	6
Skew	6
Tilt (rotation)	6
Curvature	7
V500-LPR5627 Raster Pattern	7
Electrical Specification	8
RS-232C Communications Specifications	8
Connector Pin Outs	8
Environmental Specifications	9
Ordering Information	9

Section 3: Positioning the Scanner

Achieving Optimum Performance	11
Measuring Scanner Performance	13
The Read Rate Test	13
Tips for Achieving High Throughput	14
Tips for Insuring Highest Data Integrity	14
Tips for Verifying the Presence of a Bar Code	14

Section 4: Configuring the Scanner

Configuring the Scanner	17
Default Setting	17

Section 5: Application Engineering Support

Common Causes of Poor Performance	19
---	----

Section 6: Laser Labeling

Section 7: Service and Maintenance

Appendix A: How to Program the Scanner

Appendix B: Computer Programming Commands

Appendix C: Bar Code Programming Commands

Appendix D: Dimensional Drawings

Appendix E: Optical Performance

Appendix F: PLC/Touchscreen Connection Examples

Organization of this Manual

This manual provides the necessary instructions for installing and using the Omron V500-LPN5627 and the V500-LPR5627 Fixed Position Scanners. The manual is organized as follows:

Section 1: Introduction and Getting Started

Describes the general operation of the V500-LPN5627 and V5000-LPR5627 scanners. Also provides a Quick Start-Up Procedure that allows you to begin using the scanner immediately.

Section 2: Technical Specifications

Provides complete specifications, including mechanical details, optical performance, RS-232C communications and other technical data.

Section 3: Positioning the Scanner for Optimum Performance

Provides detailed instructions and tips for mounting and positioning the scanning to obtain the best scanning performance. Application Notes describe guidelines for maximizing specific characteristics.

Section 4: Configuring the Scanner

Describes how various parameters can be programmed to customize the scanner for your specific application.

Section 5: Application Engineering Support

Discusses the most common questions and concerns when adapting the V500-LPN5627 and V500-LPR5627 scanners in your application.

Section 6: Scanner Labels

Discusses the various labels on the product required by CDRH.

Section 7: Scanner Servicing and Maintenance

Discusses maintenance and cleaning procedures.

Appendix A: How to Program the Scanner

Appendix B: Computer Programming Commands

Appendix C: Bar Code Programming Commands

Appendix D: Dimensional Drawing

Appendix E: Optical Performance

Appendix F: PLC/Touchscreen Connection Examples

Section 1

Introduction and Getting Started

Product Overview

The V500-LPN5627 and V500-LPR5627 (Raster) Fixed Position Scanners are miniature, 500 scan per second, laser bar code readers designed to be easily incorporated into host equipment. The high scan speed and small physical size make the scanner easy to integrate into any hardware design. Durability and reliability are assured.

Advanced microprocessor technology coupled with Omron's proven decoding algorithms result in high speed operation with superior accuracy. The scanners are fully programmable allowing the user to customize parameters including changing communication settings, selecting symbologies, adding prefixes and appending suffixes. Programmable settings can be downloaded from the host CPU or computer directly to the scanner.

The scanners are encased in compact, rugged metal enclosures. The compact size permits installation in the tightest areas allowing great flexibility in mounting and positioning the scanner for optimum performance.

Quick Start-Up Procedure for Computer Connections

This section is for those who wish to start using the scanner before reading the complete manual. Only a few steps are needed to make the scanner operable.

- Connect the board to a DB9 serial port, such as COM 1 on you PC.
- Be sure your PC or host device is running an application such as HyperTerminal that will accept serial input.
- The default communications parameters of the scanner are 9600 baud, 1 Start/Stop Bit, 8 Data bits, No Parity, No Handshaking, No Flow Control. See Users Manual for details on establishing or changing communications parameters.
- Plug the 5 VDC power supply into the jack on the connector.
- There is a trigger test button on the scanner.

That's it. Your PC and the scanner should now communicate.

To verify that the scanner and the PC are communicating properly, send the following command from your PC keyboard to activate the scanner's buzzer.

Send the command: **<Escape> V5 <Carriage Return>**

Note Be sure to use capital letters, e.g. "V5", not "v5". The buzzer should sound, indicating that good communications have been established.

To test the scanner, press the trigger test button on the scanner itself. A red laser light will be visible. Do not stare into the laser light.

This Quick Start-Up procedure will get you started. However, to best understand the full capabilities of this scanner, you should read the complete manual.

Section 2

Technical Specifications

Physical Specifications

Case Material	Zinc-die cast
Dimensions	1.9 x 1.5 x 0.9 in (WxDxH) (47.4 x 37.2 x 23 mm)
Weight	2.9 oz (80 grams) w/o cable
Cable length	6.5 feet (2000 mm)
Connector	9-pin Male MiniDIN Connector on “-C” units, 9-pin Female on “-P” units
Mounting	2 threaded (M-3) mounting holes (not to extend more than 3 mm into the case)

Symbologies Supported

- Codabar (NW-7)
- Code 39
- Code 93
- Code 128
- Industrial 2 of 5 Interleaved 2 of 5
- MSI / Plessey
- WPC (UPC / EAN / JAN)
- IATA

Optical Specifications

Scan rate	500 scans per second \pm 10%
Light source	650 \pm 10nm visible laser diode
Narrow Bar Resolution	6 mil (0.15 mm) at 0.9 PCS
Minimum PCS	0.45 (min. background reflectance of 70%)

Reading Distances* V500-LPN5627


Bar Code Density	Near Distance	Far Distance
40 mil (1.00 mm)	2.3 in.	12.6 in.
20 mil (0.50 mm)	2.3 in.	10.8 in.
10 mil (0.25 mm)	2.3 in.	7.5 in.
6 mil (0.15 mm)	3.5 in.	4.7 in.

* Measured from edge of scanner.


Reading Distances* V500-LPR5627 Raster

Bar Code Density	Near Distance	Far Distance
40 mil (1.00 mm)	2.3 in.	10.6 in.
20 mil (0.50 mm)	2.3 in.	9.1 in.
10 mil (0.25 mm)	2.3 in.	6.7 in.
6 mil (0.15 mm)	3.5 in.	4.3 in.


* Measured from edge of scanner.

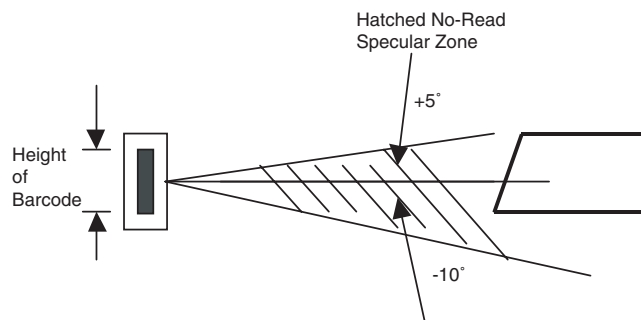Pitch

Note Recommended operation (α) at $\pm 60^\circ$ or less. Avoid specular reflection in the dead zone (hatched).

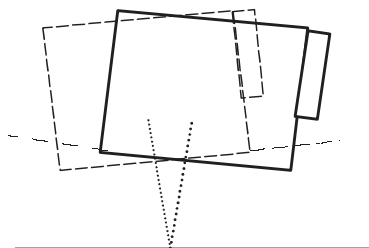
Skew

Note Recommended operation (β) $\pm 25^\circ$.

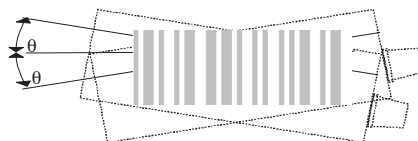
Tilt (Rotation)

Note Recommended operation (θ) $\pm 25^\circ$ (barcode aspect ratio allowing laser to cover all bars).

Curvature

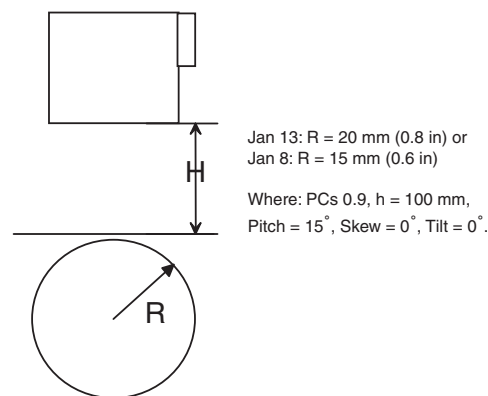

LPR5627 Raster Pattern

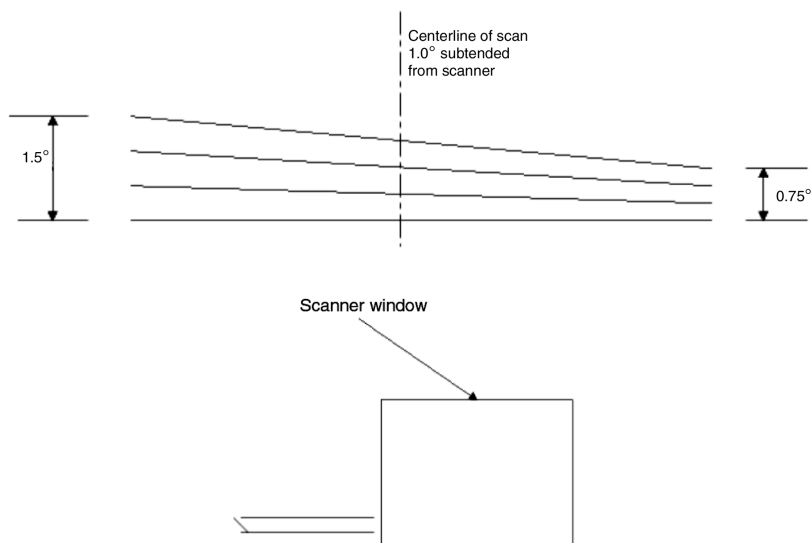

Note Raster sweep pattern as seen from front of scanner. Subtends a 1° angle from top to bottom of raster, (at the centerline) as measured from the scanner.

Electrical Specifications

Operating Voltage +5 VDC \pm 10%

Current:

Operating 150 mA idle; 350 mA max. (laser ON)

Surge 2.5 A max.

RS-232C Communications Specifications

RS232 Data Transmission Format

Parameter	Default	Optional Settings
Timing	Asynchronous	--
No. of start bits	1 bit	--
No. of stop bits	1 bit	1 or 2 bits
No. of data bits	8 bits	7 or 8 bits
Parity	None	Odd/Even/None
Baud Rate	9600 Baud	300 to 38,400 Baud
Handshaking	None	Hardware/Software/None

RS-232C Transmit / Receive Character Format

TXD/ RXD	Start Bit	LSB	7 or 8 Data Bits	MSB	Parity Bit	Stop Bit
-------------	--------------	-----	---------------------	-----	---------------	-------------

RS-232C Data Format

Transmit	Decoded Data		CR
Receive	ESC	Command	CR
	STX	Command	ETX

RS-232C Signal Level

Signal Name	In/Out	Mark/Off	Space/On
TXD	Out	-5 to -15	+5 to +15
RXD	In	-3 to -15	+3 to +15

Connector Pin-outs

9 pin Male Mini-Din Connector “-C” Units

Pin No.	Signal	Direction
1	-	-
2*	TXD	Output
3*	RXD	Input
4	DSR	-
5	Signal ground	-
6	DTR	-
7	SRTS	Output
8	CTS	Input
9	-	-

Note * NPN open collector, rated at 24 VDC, 30 mA maximum.

9 pin Female Connector “-P” Units

Pin No.	Signal	Direction
1	-	-
2	RXD	Input
3	TXD	Output
4	RTS	Connected to 5
5	CTS	Connected to 4
6	+5V	Input
7	-	-
8	-	-
9	Signal ground	-

Environmental Specifications

Temperature

Operating +32° to +113° F (0° to +45°C)

Storage +14° to +140° F (-10° to +60°C)

Humidity (non-condensing)

Operating 20% to 85%

Storage 20% to 90%

Dust/Water Designed to meet IP54

Ambient Light Fluorescent or incandescent: below 5 kilolux

Ordering Information

Part No.	Model
V500-LPN5627-C	Linear, computer
V500-LPN5627-P	Linear, Omron PLC/Touchscreen
V500-LPR5627-C	Raster, computer
V500-LPR5627-P	Raster, Omron PLC/Touchscreen

Section 3

Positioning the Scanner

Achieving Optimum Performance

Three items greatly impact performance:

- Distance (from the scan window) to the bar code
- Spectral reflection
- Quality of Bar Code labels

1) Distance to the Bar Code

The operation of the scanner is similar to a camera. If you photograph an object that is out of focus, the resulting picture will be blurry. The same is true with the scanner. If the bar code label is out of focus, the scanner may have difficulty decoding what appears to be fuzzy bars and spaces.

Focal Distance

Ideally, the distance from the window of the scanner to the bar code label should be equal to the focal distance of the scanner. For the V500-LPN5627 / V500-LPR5627 fixed position scanners, the nominal focal distance is approximately 4.0 in. from the front edge of the scanner.

Depth-of-Field

Just as with a camera, the scanner has a depth-of-field. It can read bar codes that are not precisely at the focal distance - maybe a little closer, or a little farther away. However, if the bar code label is positioned too far from the focal distance, the scanner may not be able to successfully decode it.

The depth-of-field varies based on the density of the bar code, i.e., the thickness of the bars. Very high density bar codes (which have very narrow bars) are readable over a much shorter distance range than low density bar codes with larger bars.

The following table shows the depth-of-field specifications (closest to farthest reading distances) for the V500-LPN5627 / V500-LPR5627 scanners. The actual performance may differ slightly from unit to unit. Also, it is important to note that this data was measured under ideal conditions using high quality bar code labels. In a "real world" environment the conditions will not be as ideal. Therefore, the best practice is to position the scanner at the center of the depth-of-field rather than at the extremes of its depth-of-field.

Depth-of Field* V500-LPN5627

Bar Code Density	Near Distance	Far Distance
40 mil (1.00 mm)	2.3 in.	12.6 in.
20 mil (0.50 mm)	2.3 in.	10.8 in.
10 mil (0.25 mm)	2.3 in.	7.0 in.
6 mil (0.15 mm)	3.5 in.	4.7 in.

* Measured from front edge of scanner.

Readable Bar Code Width V500-LPN5627 / V500-LPR5627

Field-of-View Specification Based Upon 40 Degree Sweep

Distance from Window	Max. Width
2.0 in.	2.0 in.
4.0 in.	3.5 in.
8.0 in.	6.4 in.
12.0 in.	9.3 in.

The table above shows the field-of-view at various distances from the window. The field-of-view is the maximum width that the scanner is capable of reading. It is the distance from the left edge of the view to the right edge. A bar code label positioned anywhere within this field-of-view can be decoded. The field-of-view is also a measure of the widest bar code label that can be read. *Remember:* The width of a bar code label includes not only the bars and spaces but also the required white space (quiet zone) on each end.

Good design policy is to position the barcode at the midpoint of the scanner's depth-of-field and at the center of the field-of-view. Do not position it near the extremes of the reading range.

Comparable depth-of-field parameters for the LPR5627 are the following:

Depth-of-field* V500-LPR5627- Raster


Bar Code Distance	Near Distance	Far Distance
40 mil (1.00 mm)	2.3 in.	10.6 in.
20 mil (0.50 mm)	2.3 in.	9.1 in.
10 mil (0.25 mm)	2.3 in.	6.7 in.
6 mil (0.15 mm)	3.5 in.	4.3 in.

* Measured from front edge of scanner.

2) Avoiding Specular Reflection

Do not position the scanner at an angle that causes the laser light to be reflected directly back into the scanner. This is called specular reflection. Too much reflected light can "blind" the scanner preventing a good decode.

If the bar code label is located on a flat surface, specular reflectivity occurs between 0 to 10 degrees off perpendicular (See diagram). If the bar code label is located on a cylindrical surface, such as a test tube, the angle of specular reflection is measured tangent to the curve. If the curved surface is also moving, there may be more than one position causing specular reflection. The following diagram indicates the area to avoid:

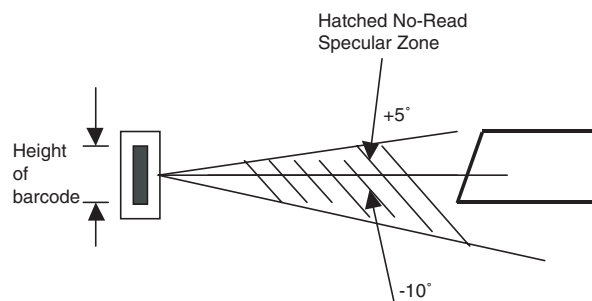

3) Quality Bar Code Labels

The quality of the bar code label can affect the scanning performance. Poor quality labels are more difficult to decode and may result in non-reads or potential misreads. The bar code label should be printed to specifications. This means that the bars are printed within spec, with the correct widths, no ink spread, crisp edges and no voids. There should be a sufficient quiet zone on both ends of the bar code label. For best results, the paper or label stock should have a matte finish to diffuse light. The print contrast signal (which is a comparison of the reflectance of the bars and the background stock) should be as high as practical.

Measuring Scanner Performance

Two methods are helpful in determining the optimum position of the scanner. The first method is to program the scanner for Trigger Disable and Continuous Read modes. The scanner will always be on and will continuously read the same bar code. Since the buzzer sounds each time the bar code is read, the sound of the buzzer can be used like a “Geiger counter.” As the position of the scanner changes the sound of the buzzer will change. The buzzer sound will be loudest and most continuous at the best reading positions.

The Read Rate Test

The second method, the Read Rate Test, provides a mathematical calculation of scanning performance. In this test the scanner scans a bar code 500 times and then calculates the number of those scans that resulted in a good decode. That number, expressed as a percentage, will be transmitted to the host. For example, 93% means that the scanner decoded the bar code symbol 93 times out of the 500 scan attempts. By performing the Read Rate Test with the scanner mounted in various positions you can determine which of those locations results in the best performance.

How to perform the Read Rate Test

Perform the following steps after you have correctly configured communications to the computer via your RS-232C port and power is made available to the scanner:

Send the command: **<Escape> U8 <Carriage Return>**

Note Be sure to use capital letters, e.g. “U8,” not “u8.”

The scanner will read the barcode continuously and will display the ratio of the number of successful reads to the total number of attempts.

The printout on the screen will appear as follows:

(Example)

500d OK 93.5%
CODE-39 TEST

The number in the upper left indicates the number of times the decoder ran while scanning at 500 scans per second. The number can be lower than 500 when reading noisy barcodes. The upper right percentage indicates the ratio of the number of successful reads to the total number of attempts. By positioning the scanner at the optimal distance from the barcode with the correct orientation and with a grade-A quality barcode, readings of 95% or higher are expected. Reset the scanner after testing.

Application Notes

Tips for Achieving High Throughput

In some applications your primary objective may be to achieve the highest possible throughput rate. The following list identifies the parameters and scanner settings that can maximize scanning and decode throughput speed.

Note By emphasizing maximum throughput, other areas of performance may be affected. For example, the number of non-reads could increase.

If high throughput is critical, consider some or all of these settings:

- Operate in the Trigger Disabled mode. Operation of the trigger can require as much as 200 msec before decoding begins, slowing down throughput rate.
- Only enable those symbologies that you will be decoding.
- Eliminate all suffixes and prefixes.
- Minimize the number of redundant reads required before transmitting data.
- Transmit the decoded data at the highest baud rate, 38,400 baud.
- Disable buzzer functions.

Tips for Insuring Highest Data Integrity

There are several parameters that can enhance your confidence that the correct bar code data is transmitted.

Note That by emphasizing the accuracy and security of the data other areas of the scanner operation may be affected. For example, you may not achieve the highest throughput.

If accuracy and data integrity are critical, consider some or all of these settings:

- Program the scanner to require a high number of redundant decodes prior to transmitting. For example, program the scanner to decode a bar code exactly the same way three consecutive times before transmitting the data. Then decoding the bar code the same way 2 out of 3 times or any 3 out of 4 times is not sufficient. It must obtain three consecutive and identical decodes.
- Utilize a predetermined, fixed-length of bar code. Program the scanner to only decode a bar code of that length. Bar codes of any other length will be ignored.
- The quality of the printed bar code must be excellent.
- Use a bar code symbology that contains an internal check digit and program the scanner to calculate that check digit for validity prior to transmitting.
- Do not use a symbology with poor internal verification, or subject to partial decodes, such as 2 of 5 or MSI/Plessey.
- Only enable those symbologies that you will be decoding.
- Transmit data at low baud rates to minimize communication errors.

Enable the "Number of Characters Transmitted." The scanner will calculate and transmit a number indicating the total number of characters it is transmitting. Your host application program can compare this number with the actual number of characters received to verify that the correct amount of data is received.

Tips for Verifying the Presence of a Bar Code

If the scanner is operated in the "trigger enabled" mode and the trigger is activated, one of three conditions may occur.

A bar code is scanned and decoded	Decoded data is transmitted
A bar code is scanned but is not decoded (e.g., print quality was poor)	No data is transmitted
No bar code is present	No data is transmitted

In some applications, when no data is transmitted, it may be important to know why. Was there a bar code present that could not be decoded, or was no bar code present at all?

This requirement is common in applications such as automated blood analysis equipment. Test tubes containing blood samples from many different people are loaded into a rack for automatic analysis. The bar code on each tube ties that sample and the results back to a specific individual. If no bar code data is transmitted it is critical to understand the reason.

Your Omron scanner, when operated in the Trigger Enabled mode, can be programmed to transmit an error message indicating whether or not a bar code was present. The following table shows the message that will be transmitted for each condition.

Presence/Absence of bar code	Scanner Transmits
Bar code was present and correctly decoded	Decoded Data
No bar code was present	<STX> "?" <ETX>
Bar code was present but could not be decoded	<STX> ">" <ETX>

Section 4

Configuring the Scanner

Since the operation of the V500-LPN5627 / V500-LPR5627 scanners are microprocessor controlled, it is possible to modify or program its operation to match your specific application. Changes in parameter settings can be accomplished two ways.


1. The scanner can be programmed by sending software instructions from the host PC to the scanner via the RS-232C connection.
2. The second method employs specially designed programming bar codes. Scanning these bar codes instructs the scanner to modify specific parameters.

Programming Menus & Commands

Appendix A contains full instructions on how to configure the scanner as well as a complete listing of the computer commands and programming bar codes that are available to customize the scanner for your application.

Default Settings

When you modify or change any parameters, the scanner can be programmed to retain the new parameter in memory, even if power is interrupted or terminated. If for any reason the scanner is instructed to return all parameters to default settings (U1), it will return to the default settings shown in the following table.

Default settings are indicated by a pointing hand symbol () throughout the bar codes menus.

Parameter	“-C” Factory Default Setting	“-P” Factory Default Settings
RS-232C Communications	9600 baud 8 data bits 1 stop bit No parity No handshaking	9600 baud 7 data bits 2 stop bits Even parity No handshaking
Trigger Function	Enabled	
Read Mode	Multiple Read Mode	
No. of Redundant Decodes	Read twice before transmitting	
UPC-A (13 digits)	Add leading zero Enable check digit	
UPC-E (7 digits)	Add leading zero No check digit	
Code 39	Do not calculate check digit/Transmit check digit Enable start/stop characters (*.....*) Disable character length of one	
Codabar	Enable start/stop characters as abcd/abcd Do not calculate check digit/Transmit check digit Disable character length of one	
2 of 5	Do not calculate check digit Disable characters length of two	
Fixed length of bar code only	Disabled	
Buzzer	Enabled	
Positive bar codes only	Disabled (Both positive and negative barcodes)	
Error indications	Do not transmit error code	
Print quality adjustment	Output from Low <u>or</u> High analog gain 1 MHz sampling rate	

Section 5

Application Engineering Support

Technical Assistance and Support

Omron is eager to help you integrate the V500-LPN5627 / V500-LPR5627 scanner into your application. Our technical support staff is available to answer any questions or work with you to adapt the scanner to your specific situation. We are happy to answer your questions, assist in configuring and positioning the scanner for optimum operation, and help resolve any problems you encounter. Call us at (800) 556-6766.

Common Causes of Poor Performance

The most common reasons for poor scanning performance are listed below:

- Bar codes are not positioned at the focal distance of the scanner.
- Specular reflection is impacting the scanner. Change the angle/position of the scanner or the bar code.
- Poor quality of printed bar codes. Bar codes are out of specification.
- The paper on which the bar code is printed is highly reflective or has a glossy finish causing light to be reflected into the scanner.
- The distance from the scanner to the bar code is not suitable for the density of the bar code. Or the density of the bar code is beyond the scanners capability. If the red illuminating light of the scanner is not on, the scanner may be in the "Trigger Enable" mode expecting a trigger signal.

Section 6

Scanner Labeling

CDRH Class II Laser Device

V500-LPN5627 / V500-LPR5627 scanners comply with Center for Devices and Radiological Health (CDRH) regulations 21, CFR Subchapter J. It is classified as a Class II Laser Device.

The V500-LPN5627 / V500-LPR5627 scanners use a low-power visible laser. As with any very bright light source, such as the sun, you should avoid staring into the light beam. Momentary exposure to a CDRH Class II laser is not known to be harmful.

A laser safety label is affixed to the scanner as shown.



If the V500-LPN5627 or V500-LPR5627 scanner is incorporated into or interfaced to other equipment, that equipment should include a laser safety label and a visible indicator that is illuminated whenever laser energy is being emitted from the scanner. This indicator may remain illuminated when the scanner is powered but the laser is not emitting energy.

Section 7

Scanner Servicing and Maintenance

 **Caution** Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous laser light exposure.

The V500-LPN5627 / V500-LPR5627 scanners contain no user adjustable or serviceable parts in the interior of the scanner. All product service must be performed by Omron. Opening the scanner will void the warranty and could expose the operator to laser light.

The V500-LPN5627 / V500-LPR5627 are warranted for 1 year including parts and workmanship. If you need warranty or out-of-warranty repair, first call Omron or your distributor to obtain a **Returned Material Authorization (RMA)** number. You will be provided a number and shipping instructions.

There is no scheduled maintenance required for the V500-LPN5627 / V500-LPR5627. The scanner can be cleaned using a water dampened, lint free or lens cloth. Be careful to avoid excessive moisture that would penetrate the housing or obscure the window. While use of cleaning fluids other than water are not recommended, a neutral detergent or ethanol would be preferred if necessary. Do not use bleach at full or diluted strength as damage to the painted case and/or window may result.

Appendix A

Programming the Scanner

Two different methods can be used to program parameters to configure the scanner:

- Programming via Computer Commands
- Programming via special Bar Codes from a menu page

Most parameters can be programmed using either of these two methods. However, there are certain parameters that are only programmable via the bar code menu.

Programming via Computer Commands

Parameters can be programmed by sending software commands or keyboard strokes from the host computer to the scanner in the following format:

<ESC> Computer Command <CR>

Note Only upper case letters are recognized, e.g., “AB” not “ab”
Each command normally consists of two characters
Downloading of software commands cannot be “grouped” together. Each command must be preceded by <ESC> and followed by a <CR>

Parameters programmed by downloaded commands can be stored permanently by transmitting a “<ESC> Z2 <CR>” command. It is not necessary to send a “Z2” command after each parameter is changed. One Z2 command will save all changes

Appendix B lists all of the Computer Commands. In Appendix C, Bar Code Programming Menus, the left-hand column in all menus contains the Computer Command associated with that bar code.

Programming via Bar Codes

Use the following steps to program parameters via the bar code menus:

1. Scan the “Start/End” bar code. This instructs the scanner to enter the Programming Mode. While in this mode the scanner will beep intermittently.
2. Scan the bar code(s) associated with the desired parameter(s). The scanner will beep when the bar code is read. Note: because of the close proximity of bar codes on the page, it is important to aim carefully to ensure that only the desired bar code is scanned.
3. Scan the “Start/End” bar code. This instructs the scanner to exit the Programming Mode.

All the parameters that were scanned are retained in memory and are stored permanently (even if the scanner is power down) or until they are changed again.

When the scanner is in the Programming Mode, you can change more than one parameter at a time. However, this may become confusing. Until you become proficient at programming you may prefer to change only a few parameters at one time. We recommend that you keep a record of the changes you have made to the scanner.

What if you make a mistake?








Don’t worry. If you are programming the scanner but are unsure of which parameters have been changed, scan the **Reset All Defaults** bar code. This bar code returns the scanner to the default settings that were installed in the factory at the time the product was manufactured. Scanning this bar code erases any change you have made, including any changes that were made during previous programming.

Reset All Defaults U1 Command (U1).

This command will return all settings to the factory default settings.

We recommend that after you have reset all defaults you also set the commands for No Handshaking (P0), All Symbolologies (A0), and Do Not Transmit Start/Stop Characters (D0) for Code 39.

Reset All Defaults

Computer Command	Function / Description	Bar Code Command
Z7	START/END Programming Mode	
U1	Reset All Defaults	
A0	Decodes all Symbolologies	
P0	No Handshaking	
D0	For Code 39: do not transmit start/stop characters *....*	
Z2	Save settings in memory	
Z7	START/END Programming Mode	

Note Appendix C contains all the Bar Code Programming menus and commands.

Appendix B

Computer Programming Commands

All commands must be preceded by an 'ESC' character and be followed by a 'Carriage Return' character. Shaded areas indicate factory default settings.

Enable	Disable	Global Defaults
U1		Enable Factory Default Settings
1Y		Clear all prefixes
1Z		Clear all suffixes
P9		Transmit Barcode Pattern Data
U8		Read Rate Test Mode
Z1		Clear all values set by command
Z2		Save all values set by command
Z3		Display software settings & version no.
Z4		Display prefix/suffix

Only	Add	Rmv	Symbology Selection
A0			Enable all symbologies
A1	B1	4A	WPC (including add-ons)
A2	B2	4H	Code 39
A3	B3	4I	Codabar (NW-7)
A4	B4	4J	2 or 5 Industrial or Interleaved
J7	R7	4K	2 or 5 Industrial
J8	R8	4L	2 or 5 Interleaved
A5	B5	4M	Code 93
A6	B6	4N	Code 128
A7	B7	4O	MSI/Plessey
A8	B8	4P	IATA
J1	R1	4B	UPC (A/E)
J2	R2	4C	UPC (A/E)+2
J3	R3	4D	UPC (A/E)+5
J4	R4	4E	EAN
J5	R5	4F	EAN+2
J6	R6	4G	EAN+5
		4Z	Disable all Symbologies

Enable	Disable	Options for UPC
E2		UPC-A (13 Digits) Leading zero & CD
E3		UPC-A (12 Digits) No leading 0 & CD
E4		UPC-A (12 Digits) Leading zero & No CD
E5		UPC-A (11 Digits) No leading 0 & no CD
E6		UPC-E (8 Digits) Leading 0 & CD
E7		UPC-E (7 Digits) No leading zero & CD
E8		UPC-E (7 Digits) Leading zero; no CD
E9		UPC-E (6 Digits) No leading 0 & no CD
Enable	Disable	Options for Code 39
7C	7D	Enable 1 character read
C1	C0	Enable Check Digit calculation
C2	C3*	Transmit Check Digit
D1	D0	Transmit start/stop characters (*.....*)

Note Only disable if C1 enabled, otherwise truncate last digit.

Enable	Disable	Options for Codabar (NW-7)
7K	7L	Enable 1 character read
F0		Do not transmit start/stop characters
F1		Transmit start/stop as ABCD/TN*E
F2		Transmit start/stop as abcd/tn*e
F3		Transmit start/stop as ABCD/ABCD
F4		Transmit start/stop as abcd/abcd
F5	F6	Transmit check digit
F7		Do not calculate check digit
F8		Calculate check digit (modulo 10)
F9		Calculate CD (modulo 16) AIM spec.
FB		Calculate check digit (modulo 7)

Enable	Disable	Options for Interleaved 2 of 5
G1	G0	Calculate check digit
G2	G3	Transmit check digit
7M	7N	Enable 2 characters

Enable	Disable	Options for IATA
D2		Do not calculate check digit
D3		Calculate CD (CPN + Form + Serial)
D4		Calculate CD (Form + Serial)
D5		Calculate check digit (all data)
D6	D7	Transmit check digit

Prefix	Suffix	Creating a Prefix and/or Suffix
1Y	1Z	Clear all
Z4	Z4	Display Prefix/suffix values & length
		Select Symbology for Prefix/Suffix
N1	N6	UPC-A
M0	O0	UPC-A +2 or +5
N2	N7	UPC-E
M1	O1	UPC-E +2 or +5
N3	N8	EAN13
M2	O2	EAN-13 +2 or +5
N4	N9	EAN-8
M3	O3	EAN-8 +2or +5
M4	O4	Code 39
M5	O5	Codabar (NW-7)
M6	O6	Industrial 2 of 5
M7	O7	Interleaved 2 of 5
M8	O8	Code 93
M9	O9	Code 128
D8	D9	IATA
N0	N5	MSI/Plessey

	Prefix/Suffix of Numeric Characters
Q0	0
thru	thru
Q9	9
	Prefix/Suffix of Alpha Characters
0A	A
thru	thru
0Z	Z
	Prefix/Suffix of Control Characters
1A	STX
1B	ETX
1C	Carriage Return (Default Suffix Character)
1D	Line Feed

	Communications Parameters
K1	300 baud
K2	600 baud
K3	1,200 baud
K4	2,400 baud
K5	4,800 baud
K6	9,600 baud
K7	19,200 baud
K8	38,400 baud
L0	7 Data Bits
L1	8 Data Bits
L2	Parity = None
L3	Parity = Even
L4	Parity = Odd
L5	1 Stop bit
L6	2 Stop bits

	Handshaking
I0	Unlimited wait for CTS from terminal
I1	100 mS wait for CTS from terminal
I2	200 ms wait for CTS from terminal
I3	400 mS wait for CTS from terminal
I4	Unlimited ACK/NAK Timeout delay
I5	100 mS ACK/NAK Timeout delay
I6	500 mS ACK/NAK Timeout delay
I7	1000 mS ACK/NAK Timeout delay
P0	No Handshaking
P1	Busy/Ready
P2	Modem
P3	ACK/NAK
P4	ACK/NAK No buzzer on timeout
P5	No ACK/NAK

Enable	Disable	Enable character length transmission
3A	2A	UPC-A
3B	2B	UPC-A +2 or +5
3C	2C	UPC-E
3D	2D	UPC-E +2 or +5
3E	2E	EAN13
3F	2F	EAN-13 +2 or +5
3G	2G	EAN-8
3H	2H	EAN-8 +2or +5
3I	2I	Code 39
3J	2J	Codabar (NW-7)
3K	2K	Industrial 2 of 5
3L	2L	Interleaved 2 of 5
3M	2M	Code 93
3N	2N	Code 128
3O	2O	MSI/Plessey
3P	2P	IATA
3Z	2Z	Transmit data length of all symbologies

Enable	Disable	Fixed Number of Digits
7V		Enable fixation (1 st Length)
7W		Enable fixation (2 nd Length)
H0		Disable fixation
H3	H2	Enable 1 digit Code 39 and Codabar (NW-7) and enable 2 digit 2 of 5

Note For “-P” type units, default communication is 9600, 7, E, 2.

	Buzzer Operation
T0	Volume = Maximum
T1	Volume = Upper mid-range
T2	Volume = Lower mid-range
T3	Volume = Minimum
V5	Ring buzzer once at 3kHz for 200 mS
V6	Ring buzzer at 3kHz & 2kHz for 200 mS
V7	Ring buzzer at 2kHz & 3kHz for 200 mS
W0	Disable Buzzer
W1	Enable buzzer at 3kHz
W2	Enable buzzer at 3kHz with 2.5kHz interval
W3	Enable buzzer at 2kHz with 3kHz interval
W4	Buzzer duration 0.10 sec
W5	Buzzer duration 0.20 sec
W6	Buzzer duration 0.40 sec
W7	Buzzer duration 0.05 sec
W8	Buzzer duration 0.01 sec

	Positive & Negative Bar Codes
V4	Positive bar codes only
V2	Both positive and negative bar codes

	Setting the Trigger Function
S7	Disable the trigger function (Laser On)
S8	Enable the trigger function (Laser OFF until the trigger is activated)
Z	Activate the trigger; turns the laser ON

	Selecting the Read Mode
S0	Single Read Mode (Trigger must be Enabled, S8)
S1	Multiple Read Mode
S2	Continuous Read Mode
7H	Does not allow first bar distortion
7I	Allow first bar distortion
7O	Normal scan

	Scanner Timeout (Trigger Enabled Mode)
Y0	Laser remains ON as long as trigger is pulled (hardware trigger only)
Y1	1 second after triggering
Y2	2 second after triggering
Y3	3 second after triggering
Y4	4 second after triggering
Y5	6 second after triggering
Y6	8 second after triggering
Y7	10 second after triggering
	Redundant Decoding
X0	Read bar code once
X1	Read bar code twice before transmitting
X2	Read bar code three times before transmitting
X3	Read bar code four times before transmitting
7R	Read bar code five times before transmitting
7S	Read bar code six times before transmitting

	Xmit Error (Trigger Enabled Mode only)
5E	Do not Xmit error code
5F	Xmit "BR" <CR> for bad read or no read
5G	Xmit <STX> ">" <ETX> for bad read; <STX> "?" <ETX> for no read
5H	Xmit ">" <CR> for bad read,"?" <CR> or no read
5I	Transmit "<CAN>" <CR> for bad read or no read
5J	Xmit "<CAN>"<ETX> for bad read or no read

	Print Quality Adjustment
X4	For lower density, poor print (low gain)
X5	For high density, good print quality bar code without voids (high gain)
X6	Xmit data from Low <u>or</u> High gain
X7	Xmit data from Low <u>and</u> High gain

	Motor Control
S6	Motor always ON
S5	Motor OFF until trigger

	Good Read LED Operation
T4	Disable good read LED (GRL)
T8	GRL ON for 0.10 seconds after decode
T5	GRL ON for 0.20 seconds after decode
T6	GRL ON for 0.40 seconds after decode
T7	GRL ON for 0.80 seconds after decode
V0	LED ON Red for 0.40 seconds
V1	LED ON Red for 0.80 seconds
V8	LED ON Green for 0.40 seconds
V9	LED ON Green for 0.80 seconds

Appendix C

Bar Code Programming Menus & Commands

Index

1. Global Default & Scanner Configurations	34
2. Symbology Selection.....	36
3. Add/Activate Specific Bar Code Symbologies.....	37
4. Delete/Deactivate Specific Bar Code Symbologies	39
5. Options for UPC	40
6. Options for Code 39	41
7. Options for Codabar (NW-7)	42
8. Options for 2 of 5.....	43
9. Options for IATA	44
10. Fixing the Number of Digits.....	45
11. Creating a Prefix and/or Suffix	46
12. Setting Prefixes (identifying the symbology)	47
13. Setting Suffixes (identifying the symbology).....	48
14. Direct Input of Numeric Characters.....	50
15. Direct Input of Alpha Characters.....	51
16. Direct Input of Control Characters.....	52
17. Enable Number of Characters/Digits Transmitted	52
18. Disable Number of Characters/Digits Transmitted	54
19. Communication Parameters.....	55
20. Handshaking	57
21. Buzzer Operation	58
22. Positive & Negative Bar Codes	60
23. Setting the Trigger Function	60
24. Selecting the Read Mode.....	61
25. Scanner Timeout (trigger enabled mode only).....	63
26. Redundant Decoding	64
27. Transmitting Error Indications (trigger enabled only).....	65
28. Print Quality Adjustments.....	65
29. Good Read Indicator Operation	66
30. Motor Control	66

1. Global Default & Scanner Configurations

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
U1	Return all parameters to Default settings	
1Y	Clear all prefixes	
1Z	Clear all suffixes	
P6	Disable Graph Mode	
U0	Scanner Test Mode	
U8	Read Rate Mode	
U9	Graph Mode (TBD)	
(Z7)	START/END Programming Menu	
Z1	Reset all values set by command	
Z2	Save all values set by command (not lost upon power off)	
Z3	Display software settings and version number	
Z4	Display prefix/suffix value length (expressed in hexa decimal format)	



Note 1. * Use Z2 Command after computer command to store settings in memory prior to power off. Where computer commands appear in parenthesis, bar code commands must be used to program the scanner.

2. Default settings for “-C” types are indicated by a pointing hand symbol (☞) throughout the bar codes menus.

3. Default settings for “-P” types are indicated by a (•).

Scanner Test Mode (U0)

This mode resets all unit parameters to a predefined set of defaults for the purpose of putting the scanner into a test mode which reads barcodes continuously. The predefined defaults are the following:

- Reads all barcodes by symbology
- No fixed number of digits defined (32 digits minimum).
- Normal scan, continuous scan.
- Large only.
- No verification, no "Bad Read (BR)".
- Buzzer 3KHz, volume maximum.
- Buzzer after decoding (10 ms).
- Good LED after decoding (green, 100 ms).
- RS-232C (9600 baud, 8, 1, no parity, no handshaking).

Straight Across Scan Mode (U3)

This mode resets all unit parameters to predefined defaults for the purpose of allowing straight across scanning of up to 3 labels. The predefined defaults are the following:

- Reads all barcodes by symbology.
- No fixed number of digits defined (32 digits max.)
- Normal scan, multiple scan.
- Trigger disable.
- Small and large.
- No verification, no "Bad Read (BR)".
- Buzzer 3KHz and 2KHz, volume max.
- Buzzer after decoding (200 ms).
- Good LED after decoding (green, 200 ms).
- RS-232C (9600 baud, 8, 1, no parity, no handshaking).

Read Rate Mode (U8)

This mode resets all unit parameters to a predefined set of defaults for the purpose of checking the scanner read rate. When activated, the test result is sent via RS-232C and indicates the ration of the number of successful read to the total number of attempts. The test result is reported in the following format:

500 d OK: 93.5%

CODE-39 TEST

Where:

- 500d indicates the number of times the decoder ran while scanning at 500 scans per second (the number can be lower the 500 with poor quality barcodes).
- 93.5% indicates the percentage of good reads to total attempts.
- The control character to be output is CD (ODE carriage return line fed),"ESC[3A" (cursor 3 line UP).

The predefined defaults are the following:

- Reads all barcodes by symbology.
- No fixed number of digits defined (32 digits max.).
- Normal scan, multiple scan.
- Trigger disabled.
- Small and large.
- Buzzer 3 KHz, volume max.
- Buzzer after decoding (10 ms.)
- Good LED after decoding (green 100 ms)
- RS-232C (9600 bps, 8, 1, np, no handshaking).

2. Symbology Selection

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
A0	Enable all bar code symbologies	
A1	Only WPC (including Addon)	
A2	Only Code 39	
A3	Only Codabar (NW-7)	
A4	Only 2 of 5 (Industrial or Interleaved)	
A5	Only Code 93	
A6	Only Code 128	
A7	Only MSI/Plessey	
A8	Only IATA	
J1	Only UPC (A/E)	
J2	Only UPC (A/E)+2	
J3	Only UPC (A/E)+5	
J4	Only EAN	
J5	Only EAN +2	

Continued on next page.....

Symbology Selection (cont)

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
J6	Only EAN +5	
J7	Only Industrial 2 of 5	
J8	Only Interleaved 2 of 5	
Z9	Remote Menu	

3. Add/Activate Specific Bar Code Symbologies

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
B1	Enable all WPC (including Addon)	
B2	Enable Code 39	
B3	Enable Codabar (NW-7)	
B4	Enable 2 of 5 (Industrial/Interleaved)	
B5	Enable Code 93 (Factory Set)	
B6	Enable Code 128 (Factory Set)	



Note 1. * Use Z2 Command after computer command to store settings in memory prior to power off. Where computer commands appear in parenthesis, bar code commands must be used to program the scanner.

2. Default settings for “-C” types are indicated by a pointing hand symbol (☞) throughout the bar codes menus.

3. Default settings for “-P” types are indicated by a (•)

Continued on next page.....

Add/Activate Specific Bar Code Symbolologies (cont.)

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
B7	Enable MSI/Plessey	
B8	Enable IATA	
R1	Enable UPC (A/E)	
R2	Enable UPC (A/E) +2	
R3	Enable UPC (A/E) +5	
R4	Enable EAN (13/8)	
R5	Enable EAN (13/8) +2	
R6	Enable EAN (13/8) +5	
R7	Enable Industrial 2 of 5	
R8	Enable Interleaved 2 of 5	

4. Delete/Deactivate Specific Bar Code Symbolologies

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
4A	Disable all WPC (including Addon)	
4B	Disable UPC (A/E)	
4C	Disable UPC (A/E) +2	
4D	Disable UPC (A/E) +5	
4E	Disable EAN (13/8)	
4F	Disable EAN (13/8) +2	
4G	Disable EAN (13/8) +5	
4H	Disable Code 39	
4I	Disable Codabar (NW-7)	
4J	Disable 2 of 5 (Industrial/ Interleaved)	
4K	Disable Industrial 2 of 5	
4L	Disable Interleaved 2 of 5	
4M	Disable Code 93	

Continued on next page.....

Delete/Deactivate Specific Bar (cont.)

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
4N	Disable Code 128	
4O	Disable MSI/Plessey	
4P	Disable IATA	
4Z	Disable all symbologies	

5. Options for UPC

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
E2	UPC-A (13 Digits) Add leading zero; Enable check digit	
E3	UPC-A (12 Digits) Do not add leading zero; Enable check digit	
E4	UPC-A (12 Digits) Add leading zero; Disable check digit	
E5	UPC-A (11 Digits) Do not add leading zero; Disable check digit	
E6	UPC-E (8 Digits) Add leading zero; Enable check digit	
E7	UPC-E (7 Digits) Do not add leading zero; Enable check digit	
E8	UPC-E (7 Digits) Add leading zero; Disable check digit	
E9	UPC-A (6 Digits) Do not add leading zero; Disable check digit	

















6. Options for Code 39

Computer Command	Function/Description	Bar Code Command	
(Z7)	START/END Programming Menu		
7C	Enable 1 character (3 characters including start/stop characters)		
7D	Disable 1 character		
C0	Disable check digit calculation		
C1	Enable check digit calculation		
C2	Transmit check digit		
C3	Do not transmit check digit		
D0	Do not transmit start/stop characters (*.....*)		
D1	Transmit start/stop characters (*.....*)		

- 43 Data digits are available: 0 to 9, A to Z (caps only) plus.- \$/ + % and space.
If a check digit is present, it will appear as part of the data.
- If the scanner is programmed to calculate the check digit, and the bar code is not printed with a check digit, the bar code will not read.
- Another option available for Code 39 is to enable the reading of a single character bar code. See the section on Fixing the Digit for this option.

7. Options for Codabar (NW-7)

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
7K	Enable 1 character (3 characters including start/stop characters)	
7L	Disable 1 character	
F0	Do not transmit start/stop characters	
F1	Transmit start/stop characters as ABCD/TN*E	
F2	Transmit start/stop characters as abcd/tn*e	
F3	Transmit start/stop characters as ABCD/ABCD	
F4	Transmit start/stop characters as abcd/abcd	
F5	Transmit check digit	
F6	Do not transmit check digit	
F7	Do not calculate check digit	
F8	Calculate check digit (Modulo 10)	
F9	Calculate check digit (Modulo 16) (AIM specifications)	
FB	Calculate check digit (Modulo 7)	

Continued on next page.....

Codabar (NW-7 Format)

Start Character	1 to 42 data digits	Check digit	Stop Character
A T
a t
A A
a a

- Codabar (NW-7) has four different start/stop character schemes as shown above. The check digit is optional and, if present, would be the last character.
- If the scanner is programmed to calculate the check digit and the bar code is not printed with a check digit, the bar code will not be read.

8. Options for Interleaved 2 of 5

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
G0	Do not calculate check digit	
G1	Calculate check digit	
G2	Transmit Check digit	
G3	Do not transmit check digit	
7M	Enable 2 characters	
7N	Disable 2 characters	

2 of 5 Format (Standard and Interleaved)

1 to 44 data digits	CD
numeric only (0 to 9)	Check digit

Omron strongly recommends that the “Fixing the Number of Digits” featured on page 45 be employed whenever 2 of 5 bar codes are used.

9. Options for IATA

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
D2	Do not calculate check digit	
D3	Calculate check digit (CPN + Form + Serial)	
D4	Calculate check digit (Form + Serial)	
D5	Calculate check digit (All data)	
D6	Transmit check digit	
D7	Do not transmit check digit	

The IATA code is a variable length symbology with an optional check digit and non-printable start/stop characters. The following characters are supported: Digits 0 up to 9.

The checksum is calculated as the modulo seven of the data string. IATA is an acronym for International Air Transport Association.

String format	CPN	AC	FC	SN	CD
Meaning of Acronym	Coupon	Airline Code	Form Code	Serial Number	Check Digit
Number of digits (15 total)	1	3	2	8	1

- Enable check digit check.
- Selection of the check digit calculation.
- Disable transmission of the check digit.

Check digit calculation: If the check digit calculation is required, then the appropriate calculation method must be selected.

10. Fixing the Number of Digits

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
7V	Enable fixation (1 Length)	
7W	Enable fixation (2 Lengths)	
(H0)	Disable fixation	
(H1)	Enable fixation (1 length)	
(H4)	Enable fixation ([†] lengths)	
H2	Disable 1 character Code 39 and Codabar (NW-7); Disable 2 characters 2 of 5	
H3	Enable 1 character Code 39 and Codabar (NW-7); Enable 2 characters 2 of 5	



To avoid truncation errors, the scanner can be programmed to only decode bar codes of one specific length, i.e., containing a specific number of digits. It is also possible to program the scanner to only decode bar codes of either of two specific lengths.

To fix one (1) length (or number of digits) of bar code:

1. Scan "START" to enter the programming mode.
2. Scan "Enable fixation (H1)" bar code.
3. Scan a sample bar code of the desired length.
4. Repeat Step #3, re-scanning the sample bar code.
5. Scan "STOP" to exit the programming mode.

To fix two (2) different lengths of bar codes:

1. Scan "START" to enter the programming mode.
2. Scan "Enable fixation (H4)" bar code.
3. Scan a sample bar code of the desired length #1.
4. Scan a sample bar code of the desired length #2.
5. Scan "STOP" to exit the programming mode.

Note Fixation can also be programmed using computer commands through your RS232 by typing <ESC>7V<CR> followed by <+>2 digit length 1<CR>. 7W would be appropriate for length 2. Type <+>00<CR> to define either length as no fixed number. "Fixing the Number of digits" can only be applied to Code 39, Codabar (NW-7), 2 or 5 and MSI/Plessey. WPC, Code 39, IATA and Code 128 are not affected.

11. Creating a Prefix and/or Suffix

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
1Y	Clear all Prefixes	
Z4	Display Prefix/Suffix value and length (expressed in hexidecimal format)	



The scanner can be programmed to transmit a prefix and/or suffix with the decoded data. A Prefix (or a Suffix) is composed of up to 4 characters. The following steps are used to establish a Prefix that will be transmitted with the bar code data:

1. Scan Start.
2. Scan the bar code representing the symbology to which you wish to add a Prefix.
3. Scan the character(s) that will comprise the Prefix. Up to four numeric, alpha or control character(s) may be used.
4. Scan "STOP" to exit the Programming mode.

Example:

To add the alpha character "A" as a Prefix and "B" as a Suffix to UPC-A bar code data:

1. Scan "START/END Programming Mode."
2. Scan N1, representing a Prefix for UPC-A.
3. Scan 0A, representing the alpha character "A."
4. Scan N6, representing a Suffix for UPC-A.
5. Scan 0B, representing the alpha character "B."
6. Scan "START/END Programming Mode."

Note The same steps are used to establish a Suffix.

12. Setting Prefixes (Identifying the Symbology)

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
1Y	Clear all Prefixes	
N1	UPC-A	
M0	UPC-A +2 or +5	
N2	UPC-E	
M1	UPC-E +2 or +5	
N3	EAN-13	
M2	EAN -13 +2 or +5	
N4	EAN-8	
M3	EAN-8 +2 or +5	
M4	Code 39	
M5	Codabar (NW-7)	
M6	Industrial 2 of 5	
M7	Interleaved 2 of 5	



Continued on next page.....

Setting Prefixes (Identifying the Symbology) (cont.)














Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
M8	Code 93	
M9	Code 128	
D8	IATA	
N0	MSI/Plessey	
Z4	Display Prefix/Suffix value and length (expressed in hexadecimal format)	

13. Setting Suffixes (Identifying the Symbology)

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
1Z	Clear all Suffixes	
N6	UPC-A	
O0	UPC-A +2 or +5	
N7	UPC-E	
O1	UPC-E +2 or +5	
N8	EAN-13	

Continued on next page.....

Setting Suffixes (Identifying the Symbology) (cont.)

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
O2	EAN-13 +2 or +5	
N9	EAN-8	
O3	EAN-8 +2 or +5	
O4	Code 39	
O5	Codabar (NW-7)	
O6	Industrial 2 of 5	
O7	Interleaved 2 of 5	
O8	Code 93	
O9	Code 128	
D9	IATA	
N5	MSI/Plessey	
Z4	Display Suffix value and length	

Note The global default, also clears all suffixes.

14. Direct Input of Numeric Characters






Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
Q0	0	
Q1	1	
Q2	2	
Q3	3	
Q4	4	
Q5	5	
Q6	6	
Q7	7	
Q8	8	
Q9	9	

15. Direct Input of Alpha Characters

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Program Menu	
0A	A	
0B	B	
0C	C	
0D	D	
0E	E	
0F	F	
0G	G	
0H	H	
0I	I	
0J	J	
0K	K	
0L	L	
0M	M	








Computer Command	Function/Description	Bar Code Command
0N	N	
0O	O	
0P	P	
0Q	Q	
0R	R	
0S	S	
0T	T	
0U	U	
0V	V	
0W	W	
0X	X	
0Y	Y	
0Z	Z	
(Z7)	START/END Program Menu	

16. Direct Input of Control Characters

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
1A	STX	
1B	ETX	
1C	CR	
1D	LF	

17. Enable Number of Characters / Digits Transmitted

This feature instructs the scanner to calculate and transmit a number indicating the total number of characters that are being transmitted to the host. This feature allows the host to verify that the correct amount of data was received.

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
3A	UPC-A	
3B	UPC-A +2 or +5	
3C	UPC-E	
3D	UPC-E +2 or +5	
3E	EAN-13	
3F	EAN-13 +2 or +5	

Continued on next page.....

Enable Number of Characters / Digits Transmitted (cont.)

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
3G	EAN-8	
3H	EAN-8 +2 or +5	
3I	Code 39	
3J	Codabar (NW-7)	
3K	Industrial 2 of 5	
3L	Interleaved 2 of 5	
3M	Code 93	
3N	Code 128	
3O	MSI/Plessey	
3P	IATA	
3Z	Transmit data length (all symbologies)	

18. Disable Number of Characters / Digits Transmitted

ComputerCommand	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
2A	UPC-A	
2B	UPC-A +2 or +5	
2C	UPC-E	
2D	UPC-E +2 or +5	
2E	EAN-13	
2F	EAN-13 +2 or +5	
2G	EAN-8	
2H	EAN-8 +2 or +5	
2I	Code 39	
2J	Codabar (NW-7)	
2K	Industrial 2 of 5	
2L	Interleaved 2 of 5	
2M	Code 93	

Continued on next page.....

Disable Number of Characters / Digits Transmitted (cont.)

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
2N	Code 128	
2O	MSI/Plessey	
2P	IATA	
2Z	Do not transmit data length (all symbologies)	

19. Communication Parameters

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
K1	300 Baud *	
K2	600 Baud *	
K3	1,200 Baud *	
K4	2,400 Baud *	
K5	4,800 Baud *	
K6	9,600 Baud	



Continued on next page

Communications Parameters (cont.)

Computer Command	Function/Description	Bar Code Command	
(Z7)	START/END Programming Menu		
K7	19,200 Baud *		
K8	38,400 Baud *		
L0	7 Data Bits *		•
L1	8 Data bits *		•
L2	Parity = None		•
L3	Parity = Even *		•
L4	Parity = Odd *		
L5	1 Stop Bit *		•
L6	2 Stop Bits *		•

20. Handshaking

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
I0	Wait for CTS from terminal = Unlimited	
I1	Wait for CTS from terminal = 100 mS	
I2	Wait for CTS from terminal = 200 mS	
I3	Wait for CTS from terminal = 400 mS	
I4	ACK/NAK Delay Time Unlimited	
I5	ACK/NAK Delay Time = 100 mS	
I6	ACK/NAK Delay Time = 500 mS	
I7	ACK/NAK Delay Time = 1000 mS	
P0	No Handshaking * (Factory Set)	
P1	Busy/Ready *	
P2	Modem *	
P3	ACK/NAK *	
P4	ACK / NAK no buzzer response on timeout*	
P5	No ACK/NAK *	



21. Buzzer Operation

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
T0	Volume = Maximum	
T1	Volume = Upper Mid-range	
T2	Volume = Lower Mid-range	
T3	Volume = Minimum	
V5	Ring buzzer once at 3kHz for 200 mS	
V6	Ring buzzer once at 3kHz, 2kHz interval for 200 mS	
V7	Ring buzzer once at 2kHz, 3kHz interval for 200 mS	
W0	Disable buzzer	
W1	Enable buzzer at 3kHz	
W2	Enable buzzer at 3kHz with 2.5kHz interval	
W3	Enable buzzer at 2kHz with 3kHz interval	
W4	Buzzer duration 0.10 sec	

Continued on next page

Buzzer Operation (cont.)

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
W5	Buzzer duration 0.20 sec	
W6	Buzzer duration 0.40 sec	
W7	Buzzer duration 0.05 sec	
W8	Buzzer duration 0.01 sec	



22. Positive & Negative Bar Codes

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
V4	Positive bar code only (black bars/white spaces)	
V2	Both positive & negative bar code	



23. Setting the Trigger Function

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
S7	Disable the trigger function / Red scanning light is ON continuously (Factory Set)	
S8	Enable the trigger function /Red scanning light is OFF until trigger is activated or "pulled"	
Z	Activate the trigger; turns on the red scanning light	Use Computer Command



The trigger function is disabled in the default setting. This means that the red scanning light is "ON" continuously and the scanner is always ready to read. For some applications, you may wish to activate the scanner only at a specific time. This can be done by enabling the Trigger function. Once in the "Trigger Enabled" mode, the red scanning light is OFF until the trigger is activated or "pulled." Either a hardware trigger or a software trigger pulse may be used to activate the scanner.

The hardware trigger for "-P" types (external wires from connector) is actuated by pulling Pin #1 LOW. The software trigger is actuated by downloading and <ESC> Z <CR> computer command from the host. (See Scanner Timeout to establish the length of time the scanning light remains ON after the trigger is activated).

24. Selecting the Read Mode

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
S0	Single Read Mode (Trigger enabled mode only)	
S1	Multiple Read Mode	
S2	Continuous Read Mode	
7H	Does not allow first bar distortion	
7I	Allow first bar distortion *	
7O	Normal Scan	
7P	Slanted Scan	
7Y	Regular expression up to 5 labels	

* Relaxes tolerance on first bar, increasing to 8x narrow bar width on first bar.
Decoding time may be increased.

Continued on next page.....

Selecting the Read Mode (cont.)

The operation of the scanner in the various read modes is described in the table below. The “Continuous Read” mode is helpful in positioning the scanner for optimum reading. In “Continuous Read,” the scanner’s buzzer functions like a Geiger counter, sounding the most active at the position achieving the greatest number of good reads.

Mode	Trigger Function Enabled	Trigger Function Disabled
Multiple Read	After receiving a trigger pulse, scanner will read multiple, different bar codes in succession until it times out.	Scanner will read different bar codes in succession if they are presented to the read window.
	Scanner will not read the same bar code twice if they are consecutive.	Scanner will not read the same bar code twice if they are consecutive.
Continuous Read	Scanner will read the same bar code continuously after receiving a trigger pulse until scanner times out.	Scanner will read the same bar code continuously.
Single Read	Scanner will read only one bar code after receiving a trigger pulse.	Same as Multiple Read mode, above.

25. Scanner Timeout (Trigger Enabled Mode only)

These commands, which are only applicable in the Trigger enabled mode, establish the time-out period after the trigger pulse is received. The Time-out period is the same whether the scanner is operating in Single, Multiple or Continuous Read mode.

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
Y0	Trigger remains ON as long as trigger is pulled (hardware trigger only)	
Y1	1 Second after triggering	
Y2	2 Seconds after triggering	
Y3	3 Seconds after triggering	
Y4	4 Seconds after triggering	
Y5	6 Seconds after triggering	
Y6	8 Seconds after triggering	
Y7	10 Seconds after triggering	



26. Redundant Decoding

The Number of Redundant Decodes determines how many times the scanner must decode a bar code and obtain the same value before it will transmit the data. For example, if the redundancy is set at three times, the scanner will not transmit data until it has decoded the bar code and obtained the same values three times in succession. If it obtains the same value twice in a row, but a different value on the third read attempt, it will not transmit. If it gets the same value three out of four times, it will not transmit. It must receive three consecutive, identical reads.

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
X0	Read bar code once	
X1	Read bar code twice	
X2	Read bar code three times	
X3	Read bar code four times	
7R	Read bar code five times	
7S	Read bar code six times	



27. Transmitting Error Indications (Trigger Enabled only)

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
5E	Do not transmit error code	
5F	Transmit "BR" <CR> for bad read or no read	
5G	Transmit <STX>">"<ETX> for bad read; <STX>"?"<ETX> for no read	
5H	Transmit ">"<CR> for bad read Transmit "?"<CR> for no read	
5I	Transmit "CAN"<CR> for bad read or no read	
5J	Transmit <STX>"CAN"<ETX> for bad read or no read	

**28. Print Quality Adjustments**

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
X4	For lower density, poor print quality bar code, e.g., dot matrix with voids (low analog gain)	
X5	For high density, good print quality bar code without voids (high analog gain)	
X6	Output data obtained from Low <u>or</u> High analog gain	
X7	Output data obtained from Low <u>and</u> High analog gain	



29. Good Read LED Operation

Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
T4	Good read LED disabled after decode	
T8	Good read LED ON after decode for .10 seconds	
T5	Good read LED ON after decode for .20 seconds	
T6	Good read LED ON after decode for .40 seconds	
T7	Good read LED ON after decode for .80 seconds	
V0	LED ON Red for .40 seconds	
V1	LED ON Red for .80 seconds	
V8	LED ON Green for .40 seconds	
V9	LED ON Green for .80 seconds	



* Use Z2 computer command to store in memory prior to power off.

30. Motor Controls




Computer Command	Function/Description	Bar Code Command
(Z7)	START/END Programming Menu	
S6	Motor always ON	
S5	Motor OFF until trigger	



Appendix D


Dimensional Drawings

Unit: mm

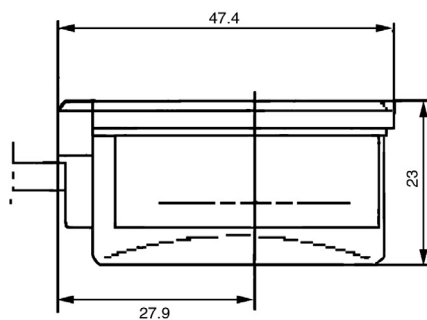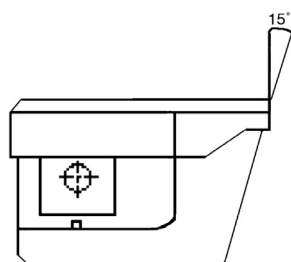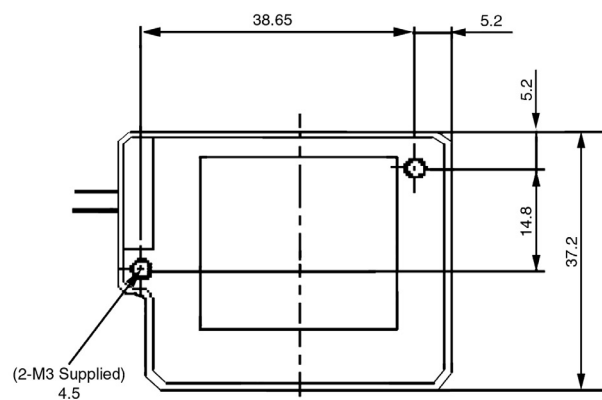


Appendix E

LPN5627 - Optical Performance (typical unit)

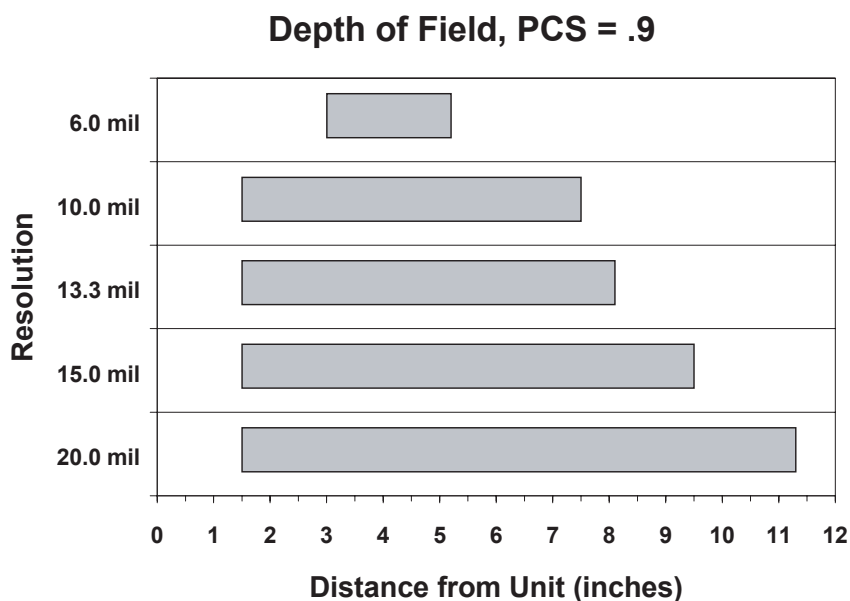


LPR5627 (Raster) - Optical Performance (typical unit)

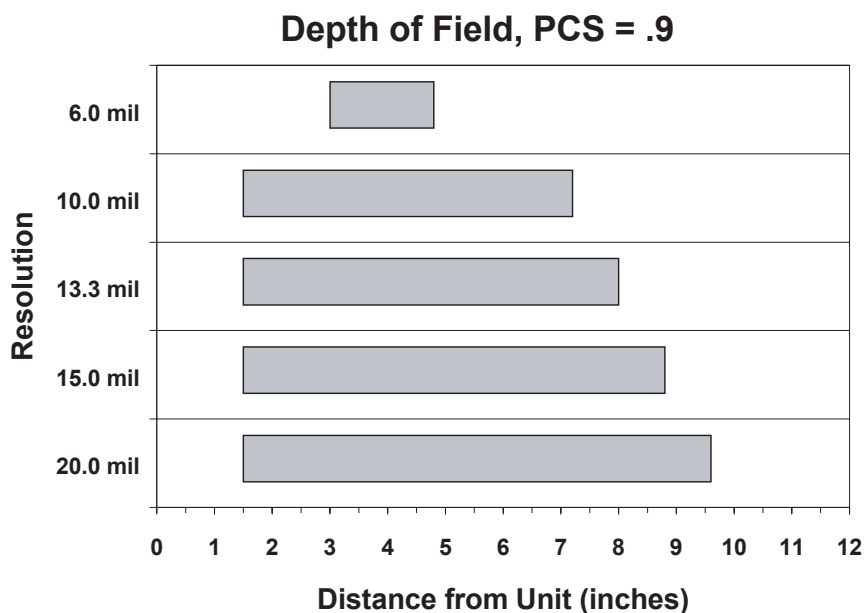

Appendix F

PLC Connection Examples for Serial Trigger

Sysmac PLC Series CPM2A, CPM2C, CJ1, CS1 (with serial ports providing 5V)

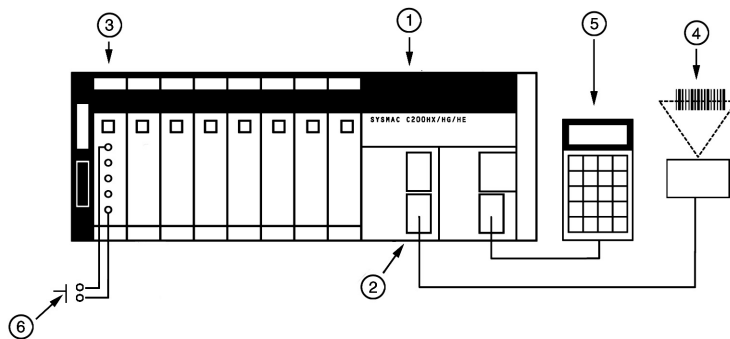

1	CPU unit	CS1G/H - CPU xx
2	PLC serial port	Built into CPU
3	Input module	C200H-ID xxx
4	Bar code reader	V500-LPx5627-P
5	Programming console	C200H-PR027-E
6	Trigger switch	-

■ Operation

Switch ON trigger switch (6), shown above to execute V550 to read and send data to data memory of PLC. Use program console (5) to confirm the date.

■ V500-LPx5627-P Setup

- Communication condition (setup)
 - Baud rate: 9600 bps
 - Word length: 7 bits
 - Parity: Even
 - Stop bit: 2 bits
- Trigger Requirements
 - Start command Z (fixed)

■ PLC Setup


- Communication condition
 - Set serial port for RS-232C (no protocol)
- Setting start code
 - Place the number 5A00 into DM100
- Connection of trigger switch
 - Connect a normally open switch to input 0000.00 of the input module to be able to initiate the BCR
- BCR data will be placed in data memory starting at DM200

Note For multidrop RS422/485 connections, use K3SC converter at each BCR and set each BCR with unique prefix.

■ Confirmation of Operation


- After programming, set the PLC to run on monitor mode.
- Press the keys below in order if <password> is displayed.
 - (1) CLR → (2) MONTR → (3) → CLR → (4) CLR
- To see BCR data on program console:
 - (1) CLR → (2) FUN → (3) MONTR

■ PLC Programming

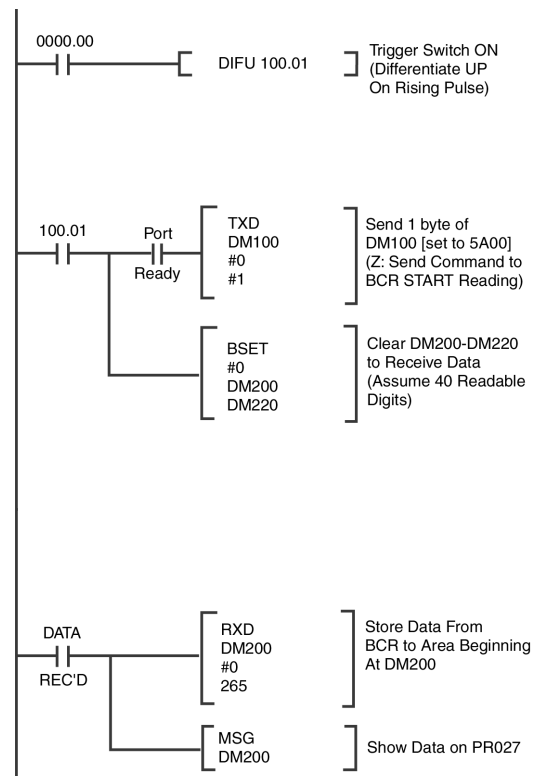

PLC Connection Examples for External Trigger

Sysmac PLC Series CPM2A, CPM2C, CJ1, CS1 (with serial ports providing 5V)

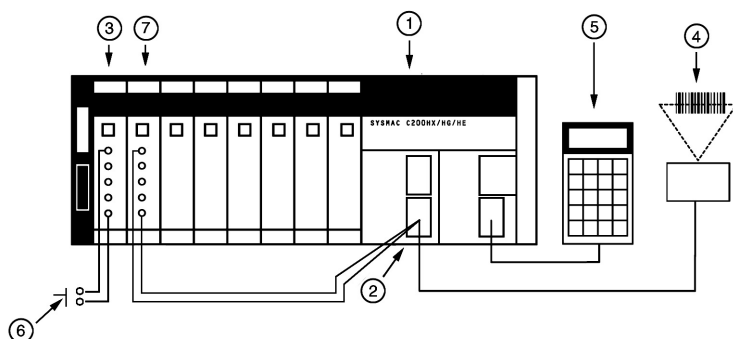

1	CPU unit	CS1G/H - CPUxx
2	PLC serial port	Built into CPU
3	Input module	C200H-IDxxx
4	Bar code reader	V500-LPx5627-P
5	Programming console	C200H-PR027-E
6	Trigger switch	-
7	Output module	C200H-OCxxx

■ Operation

Switch ON trigger switch (6), shown above to execute V550 to read and send data to data memory of PLC. Use program console (5) to confirm the date.

■ V500-LPx5627-P Setup

- Communication condition (setup)

Baud rate:	9600 bps
Word length:	7 bits
Parity:	Even
Stop bit:	2 bits

■ PLC Setup


- Communication condition
 - Set serial port for RS-232C (no protocol)
- Connection of trigger switch
 - Connect a normally open switch to input 0000.00 of the input module to be able to initiate the BCR
- Connection of output to trigger BCR
 - Connect external wires from BCR to relay output module 0001.00 of PLC (dry contact)
- BCR data will be placed in data memory starting at DM200

Note For multidrop RS422/485 connections, use K3SC converter at each BCR and set each BCR with unique prefix.


■ Confirmation of Operation

- After programming, set the PLC to run on monitor mode.
- Press the keys below in order if <password> is displayed.
 - (1) CLR → (2) MONTR → (3) → CLR → (4) CLR
- To see BCR data on program console:
 - (1) CLR → (2) FUN → (3) MONTR

■ PLC Programming

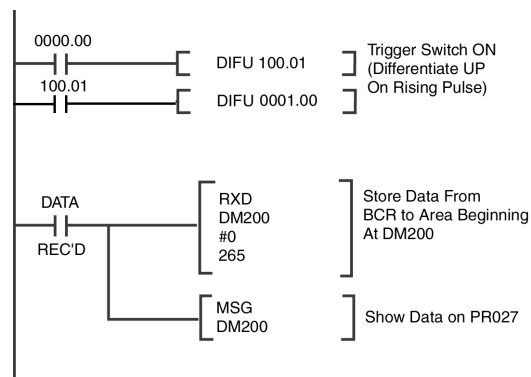

Touchscreen Connections Example

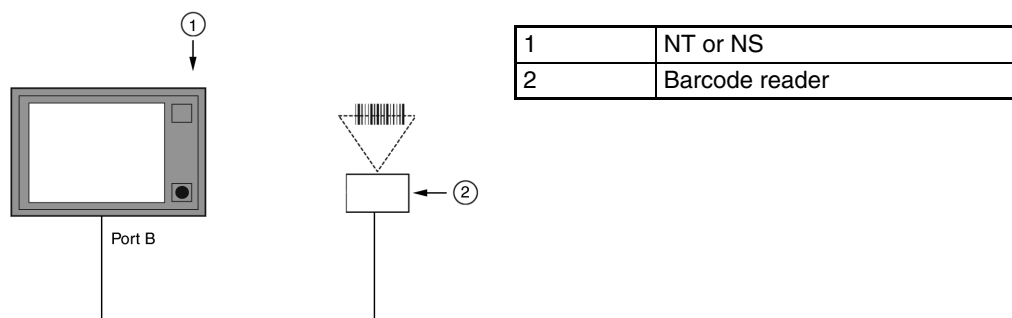

■ Operation

On actuation of a string display on the screen, the barcode read from BCR will be displayed.

■ V500-LPx5627-P Setup

- Add the STX prefix and ETX suffix to the data by scanning the codes in the operation manual of the BCR.
- Set to “DISABLE” the trigger function and “MULTIPLE READ.”

■ NS/NT Setup

- Verify that the communications parameters match the BCR:
 - 9600 bps
 - 7 data bits
 - 2 stop bits
 - EVEN parity
- Create a screen with a “string display” on it and set its attributes to the bar code input.

Revision History

A manual revision code appears as a suffix to the catalog number on the front cover of the manual.

Cat. No. Q06BAZ1



Revision code

The following table outlines the changes made to the manual during each revision. Page numbers refer to the previous version.

Revision code	Date	Revised content
1	April 2003	Original production



OMRON ELECTRONICS LLC

1 Commerce Drive
Schaumburg, IL 60173
847.843.7900
For US technical support or
other inquiries: 800.556.6766

OMRON CANADA, INC.

885 Milner Avenue
Toronto, Ontario M1B 5V8
416.286.6465

OMRON ON-LINE

Global - <http://www.omron.com>
USA - <http://www.omron.com/oei>
Canada - <http://www.omron.ca>

UNITED STATES

To locate a Regional Sales Office, local Distributor or
to obtain product information, call: 847.843.7900

CANADA REGIONAL SALES OFFICES

Ontario	Toronto	416.286.6465
	Kitchener	519.896.1144
	Kingston	613.376.3968
Quebec	Montreal	514.636.6676
British Columbia	Vancouver	604.522.8855
Alberta	Edmonton	403.440.0818
	Calgary	403.257.3095

BRAZIL SALES OFFICE

Sao Paulo 55.11.5564.6488

ARGENTINA SALES OFFICE

Cono Sur 54.114.787.1129

MEXICO SALES OFFICES

Florida 954.227.2121	Ciudad Juarez 656.623.7083
Mexico, D.F. 555.534.1195	Monterrey, N.L. 818.377.4281